

Wireless Presentation System Quick Start Guide

v.2

Package Contents

Transmitter: Type-C

Transmitter



Type-C Cable



Transmitter: HDMI

Transmitter



HDMI Cable



USB Cable



Receiver

Receiver



2 Antennas



HDMI Cable



 
Adapter



Velcro Strap (For RX)



Bracket (For RX)




Screws (For RX)



Quick Start Guide



 
Installation Suggestion

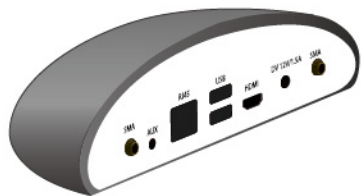


1



 2

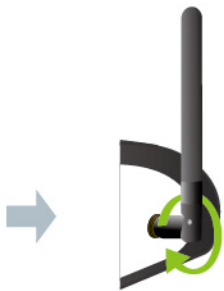


Installation Suggestion

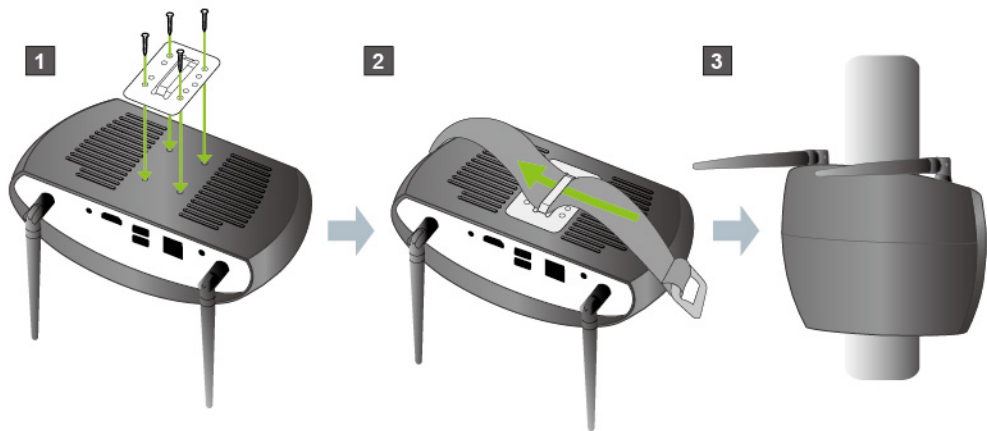 

Receiver Installation

 Back

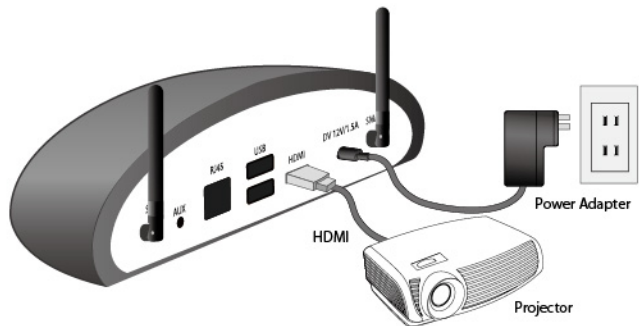

Front



 
Transmitter Installation

Transmitter: Type-C

• Requires USB 3.1 Type-C (Display Port) or Thunderbolt™ 3 Type-C connector on PC



Transmitter: HDMI

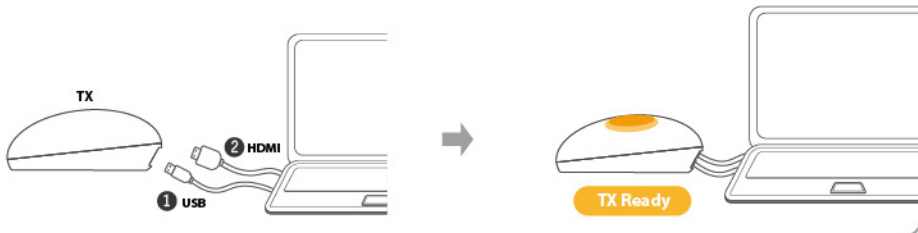

Start/Stop

 


Briefly rest palm on TX




1

Tap around the LED lights
for one second.

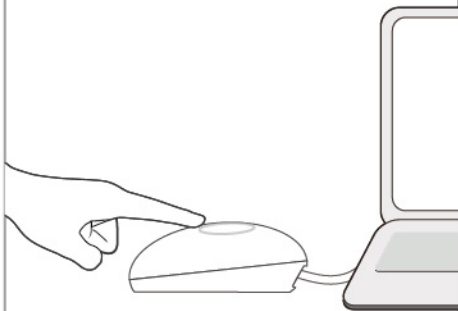

2

 Green light flashes



Appendix

 
Select

**Make a clock-wise
Circle with finger tip**





OK

Briefly rest palm on the TX


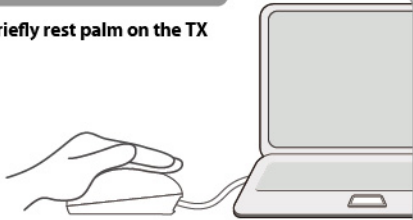


Menu	Usage
VIP	Projection Priority for the selected TX
Re-Scan	Re-Scan and select Wi-Fi Channel
Volume +	Suitable for speakers below 5W
Volume -	Suitable for speakers above 20W
EXIT	Exit selection menu

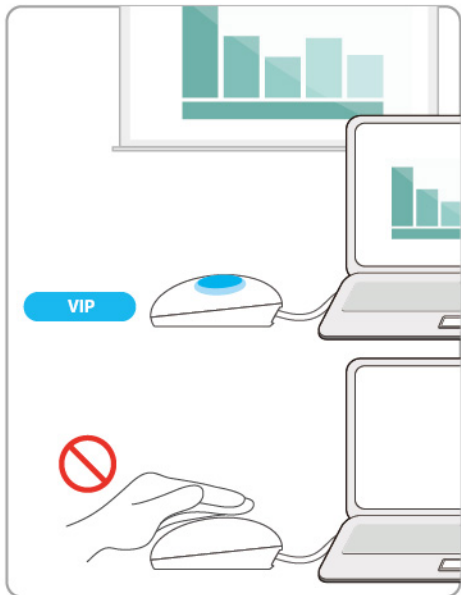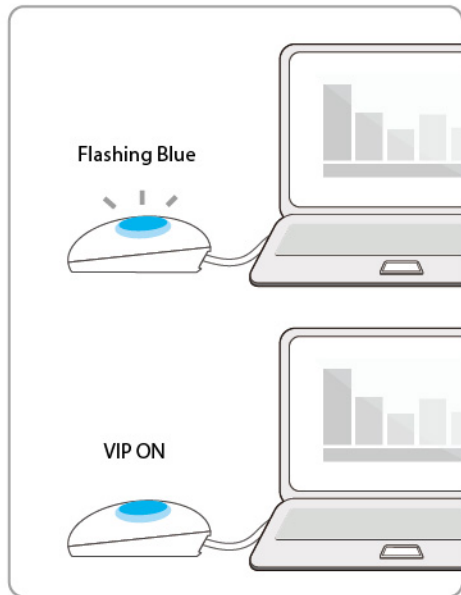  

TX Pairing Process

  - If you have purchased additional TX unit(s), please pair them with your RX by following this simple process.

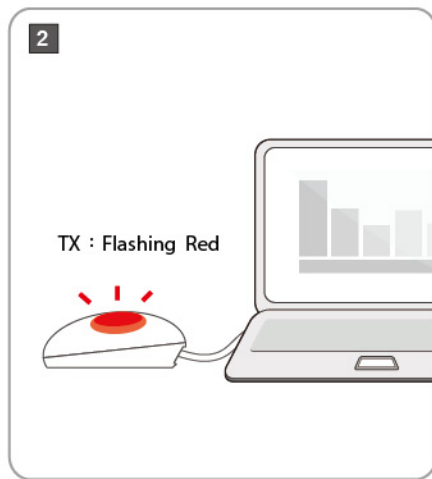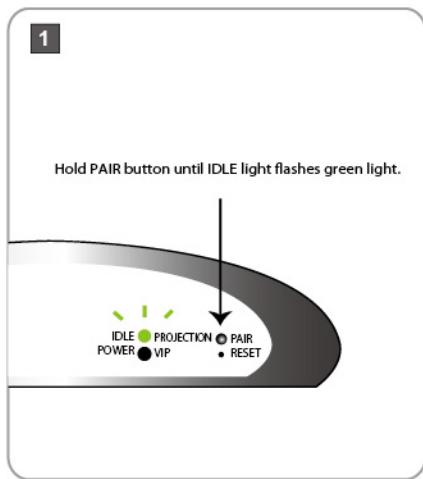

TX Pairing Process

3

TX : Touch on the surface, continue in a circular motion until green light flashes, then let go.



4

Pairing

TX : Flashing Green



5

 
Pairing OK SN :

TX : Pairing Completed



TV Dongle

1

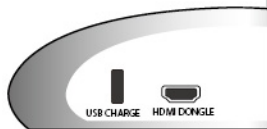


TV Dongle

2

RX Idle

IDLE ● PROJECTION ● PAR
POWER ● WP ● RESET

 TX Idle

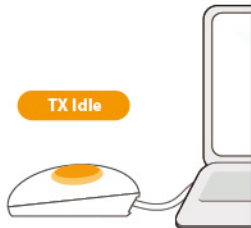


3




Receiver Interface

 Front

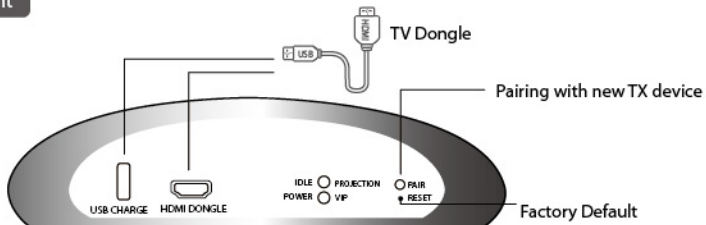


Back

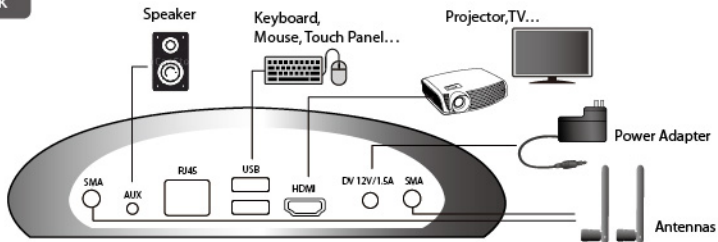 

Transmitter Interface

- Speaker and microphone recommended distance of at least 1 meter

 Type-C

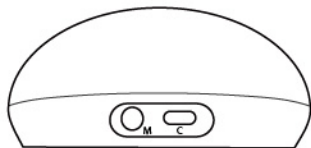


Microphone



Type-C Cable



 HDMI

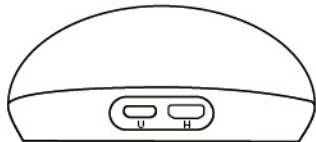

USB Cable



HDMI Cable



產品保證卡

保證條款

1. 保修期：產品提供一年免費售後維修服務。
2. 銷售日期：依照經銷商蓋章之保證卡登記日期或本公司電腦建檔出貨日期為準。
3. 無法提供免費保修情況：以下情況不提供免費保修服務：
 - A. 未按照使用手冊或說明書規定，錯誤或不當使用，造成損壞者。
 - B. 產品序號貼紙遭損毀以致無法辨識保證期限，或遭重貼、偽造者。
 - C. 摔壞、浸水、受潮、腐蝕、異物侵入、遺失零組件而損壞者。
 - D. 因天災或不可抗力外力而造成損壞或故障。
 - E. 自行拆開維修、改裝與不當之非原廠維護處理，所發生之破損或故障。
 - F. 超過保修期，在正常狀態下使用本產品而發生故障。
4. 保修期後之維修：非保修範圍發生之故障，使用者需要支付材料費、維修費、及運送費用。
5. 保證卡之使用：請用戶妥善保存此卡，以作為維修及銷售日期之認定；如遺失恕不補發。無法出示本卡時銷售日期將以本公司電腦建檔為準。

产品保证卡

保证条款

1. 保修期：产品提供一年免费售后维修服务。
2. 销售日期：依照经销商盖章之保证卡登记日期或本公司计算机建档出货日期为准。
3. 无法提供免费保修情况：以下情况不提供免费保修服务：
 - A. 未按照使用手册或说明书规定，错误或不当使用，造成损坏者。
 - B. 产品序号贴纸遭损毁以致无法辨识保证期限，或遭重贴、伪造者。
 - C. 摔坏、浸水、受潮、腐蚀、异物侵入、遗失零组件而损坏者。
 - D. 因天灾或不可抗力外力而造成损坏或故障。
 - E. 自行拆开维修、改装与不当之非原厂维护处理，所发生之破损或故障。
 - F. 超过保修期，在正常状态下使用本产品而发生故障。
4. 保修期后之维修：非保修范围发生之故障，使用者需要支付材料费、维修费、及运送费用。
5. 保证卡之使用：请用户妥善保存此卡，以作为维修及销售日期之认定；如遗失恕不补发。无法出示本卡时销售日期将以本公司计算机建文件为准。

Product Warranty Card

Terms of Warranty

1. Warranty period: One-year free maintenance warranty is provided from the date of purchase.
2. Date of purchase: The date of purchase is verified by the date on the distributor's warranty card or the shipping date in our database.
3. Warranty exclusion: Free warranty services can not be provided in the following case.
4. Out of warranty period: Users are responsible for the parts replacements, labor and shipping costs.
5. Warranty card: Please properly store the warranty card as the card may be requested as proof of purchase when maintenance service is needed. the warranty card will not be reissued if it is lost or damaged.

Prodcedure of Maintenance

1. Take the product along with warranty card and copy of receipt or invoice to location of purchase for service.
2. Customer is responsible for delivery charges, if any, to the service location

維修流程

1. 請準備本保證卡、購買發票或收據（複印本），持產品前往購買產品處，要求進行維修。
2. 保修期內，客戶需支付產品運送到最近維修點運送費用。

维修流程

1. 请准备本保证卡、购买发票或收据（复印本），持产品前往购买产品处，要求进行维修。
2. 保修期內，客戶需支付产品运送到最近维修点运送費用。

經銷商確認章 / Seal by distributor

Serial Number

□

